

ATT:

LOADING CREDIT FOR MODEL CLASSIC

Step 1

To obtain the Return Code on a Frama model Classic

To obtain the Return Code, please follow the steps listed below:

1. The following screen will appear:
Press and hold the right hand button below the LCD Screen, which shows the DATE or NO CREDIT, until a "T" appears.
2. Release the button and press it again.
3. The RETURN CODE will be displayed on the screen (8 numbers).

Step 2

Please note: Credit can only be loaded when your machine is empty and displays "no credit".

To load credit, please follow the steps listed below:

1. Press and hold the right hand button below the LCD Screen, which shows NO CREDIT, until a "T" appears.
2. Release the button and press it again.
3. The RETURN CODE will be displayed on the screen.
4. Release the button and press it again, a flashing "0" will be displayed.
5. Press the left button once, the flashing "0" will become a flashing "1".
6. Press the right hand button once to confirm or enter the number "1".
7. A flashing "0" will now appear to the right of the "1".
8. Press the left hand button repeatedly until the required number for the second number on your reset code is reached, e.g. if you require a "5", press the left hand button 5 times.
9. Press the right hand button once to confirm or enter the required number.
10. Repeat steps 8 and 9 above until the full RESET CODE has been entered, making sure that you confirm or enter the last number of your RESET CODE as well.

Once you have completed the above steps, "CHECKING" will be displayed on the screen.

After a few seconds the date will appear, your Franking machine will be credited and is ready for franking.